

MAPELEVEL EASYCLICK SYSTEM

Screw levelling system for ceramic and stone floor and wall tiling with click system for quick insertion and screw removal



BENEFITS AND FEATURES

- Quick insertion with “click system”
- Faster removal - immediate screw ejection
- Easy and accurate levelling
- Manual installation and removal
- Open-view cap design allows to check for accurate tile levelling
- Reusable cap
- Complete range of spacers to adapt to all laying patterns

WHERE TO USE

MapeLevel EasyClick System is a tile levelling system for ceramic and stone tiles, used on floors and walls and is particularly recommended for the installation of large format tiles.

MapeLevel EasyClick System has been developed to help installers during tile installation. It enables to prevent lippage between adjacent tiles and obtain perfectly flat tiling on floors and walls.

TECHNICAL CHARACTERISTICS

MapeLevel EasyClick System is a screw levelling system for tiles from 3 to 21 mm thick. It consists of two elements:

- **MapeLevel EasyClick Cap**, a reusable polypropylene levelling cap, with a special click system for faster application and removal;
- an HDPE screw spacer available in 3 models to be chosen according to the type of tile and installation pattern:
 - **MapeLevel Easy Spacer L-I** (linear spacer)
 - **MapeLevel Easy Spacer L-T** (T spacer)
 - **MapeLevel Easy Spacer L-X** (X spacer).

Each model of spacer is available in 5 different thicknesses (1, 1.5, 2, 3 and 5 mm) identified by 5 different colours, to form grout joints from 1 to 5 mm wide. To form wider grout joints, **Mapei Tile Spacer** in the width required may

also be used together with the system.

The cap is the same for all models and sizes of **MapeLevel Easy Spacer L**.

Thanks to the special click system, **MapeLevel EasyClick Cap** can be applied more rapidly by pressing the buttons on the cap, thereby considerably reducing overall installation time. Tile levelling can be completed by simply tightening the cap: in this way, complete tile levelling is obtained with less effort.

The special open-view design of **MapeLevel EasyClick Cap**, with wide lateral openings, allows the tile installer to check for accurate tile levelling.

The optional anti-scratch accessory disk **MapeLevel Easy Shield** is also available, to be applied on the cap for prevention from scratches during levelling or removal and for protection of tiles' surfaces.

MapeLevel EasyClick System does not require any additional tools: it is designed for manual installation and removal without the need of screwers or unscrewers. Just two elements are required to prevent lippage between adjacent tiles and obtain a perfectly level tiling.

ADVANTAGES

MapeLevel EasyClick System is characterised by fast and easy application and removal. It has been specifically designed to allow a quicker insertion of the cap on the screw and a faster ejection of the disposable elements. Thanks to the special click system, **MapeLevel EasyClick Cap** is applied without screwing, by simply pressing the buttons on the sides of the cap.

Screw removal is also easier and extremely quick: by pressing the buttons on the cap, the thread is automatically ejected, avoiding manual or mechanical removal.

MapeLevel EasyClick System is highly versatile and is suitable for use with tiles in a wide range of thicknesses. It includes a complete range of spacers in order to adapt to all installation patterns and offers lower consumption rates compared with traditional wedge systems.

MapeLevel EasyClick System is made from recycled plastic.

APPLICATION PROCEDURE

Before installing **MapeLevel EasyClick System**, make sure it is suitable for the tile and the stone finish chosen. Make sure the tile surface is perfectly clean and free from residues of tile adhesive or abrasive material before using **MapeLevel EasyClick System**.

Setting spacers

Spread the adhesive and place the screw spacers **MapeLevel Easy Spacer L** under the tile, using the number and model of spacers most suitable for the format and layout of the tiles: **MapeLevel Easy Spacer L-I** for linear grout joints, **MapeLevel Easy Spacer L-T** for T joints and **MapeLevel Easy Spacer L-X** for cross joints. Then install adjacent tiles.



Tile levelling

Insert **MapeLevel EasyClick Cap** on the screws by pressing the buttons on the cap until it comes into contact with the tiles. Complete tile levelling by tightening the cap until the tiles are completely levelled.



Removal

Once the adhesive has set, remove the levelling system by striking **MapeLevel EasyClick Cap** with a rubber mallet (or with your foot) parallel to the grout joint.

For quick and easy removal, **MapeLevel Easy Spacer L** spacers are designed to break off perfectly below the surface of the tile.


To remove the disposable elements from the cap, press the buttons and the thread will be automatically ejected, without the need of any other tool or unscrewdriver. The caps can then be used again to install other tiling.



CONSUMPTION TABLE

Approximate consumption (number of caps and spacers) for an area of 10 m²


Linear installation

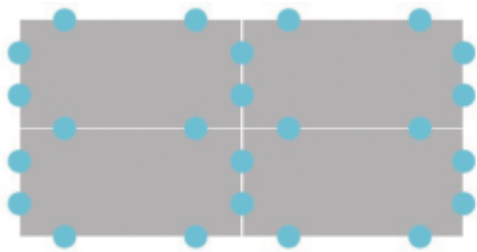


A																			
10	1980																		
15	1317	876																	
20	495	328	490																
25	396	263	391	312															
30	660	438	488	389	431														
40	495	328	365	291	322	240													
45	440	292	324	258	285	213	189												
50	396	263	291	232	256	191	169	152											
60	330	219	242	193	212	158	141	126	105										
75	396	263	258	206	212	158	140	126	104	99									
80	371	246	241	192	198	148	131	117	97	93	87								
90	330	219	214	171	176	131	116	104	86	82	77	68							
100	297	197	192	153	157	117	104	93	77	73	68	61	54						
120	330	219	200	160	157	117	104	93	77	71	66	59	52	49					
150	330	219	192	153	146	109	96	86	71	64	60	53	47	44	38				
180	330	219	186	149	139	103	91	82	68	60	56	49	44	40	34	31			
200	347	230	192	153	140	104	92	83	68	59	55	49	44	39	33	30	28		
cm	10	15	20	25	30	40	45	50	60	75	80	90	100	120	150	180	200	B	



Cross joint installation

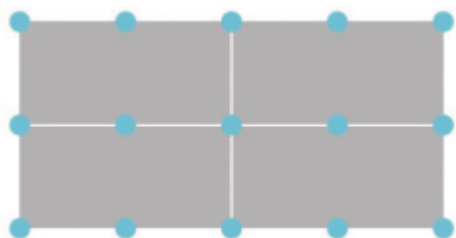

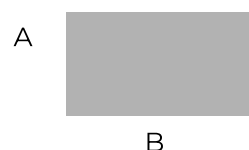

A					
10	980				
15	650	431			
20	485	322	240		
25	386	256	191	152	
30	320	212	159	126	105



40	485	322	240	191	159	178													
45	430	286	213	170	141	157	140												
50	386	256	191	152	126	141	125	112											
60	320	212	159	126	105	117	104	93	77										
75	387	256	191	152	126	125	111	99	82	81									
80	362	240	179	143	118	117	103	93	77	76	71								
90	321	213	159	126	105	103	92	82	68	67	63	56							
100	287	190	142	113	94	92	82	73	60	60	56	50	44						
120	321	213	159	126	105	96	85	76	63	60	56	49	44	43					
150	321	213	159	126	105	92	82	73	60	55	52	46	41	38	34				
180	321	213	159	126	105	89	79	71	59	52	49	43	38	36	31	28			
200	337	223	167	133	110	92	81	73	60	53	49	44	39	35	30	27	26		
cm	10	15	20	25	30	40	45	50	60	75	80	90	100	120	150	180	200	B	

The consumption rates are approximate and depend on the layout and flatness of the tiles

PACKAGING

Product	Size (mm)	Colours	Packaging	Pallets	
 MapeLevel EasyClick Cap			Box of 10 x 50 piece bags	12 boxes	
	MapeLevel Easy Spacer L - I	1	green	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - I	1.5	grey	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - I	2	black	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - I	3	white	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - I	5	red	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - T	1	green	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - T	1.5	grey	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - T	2	black	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - T	3	white	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - T	5	red	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - X	1	green	Box of 25 x 100 piece bags	12 boxes

	MapeLevel Easy Spacer L - X	1.5	grey	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - X	2	black	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - X	3	white	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Spacer L - X	5	red	Box of 25 x 100 piece bags	12 boxes
	MapeLevel Easy Shield			Box of 35 x 50 piece bags	12 boxes

SAFETY INSTRUCTIONS FOR PREPARATION AND APPLICATION

MapeLevel EasyClick System is an article that, according to current European Regulations (Reg. (EC) 1907/2006 - REACH), does not require a Material Safety Data Sheet. When using this product it is recommended to wear gloves and safety goggles and to follow the safety guidelines for the area in which work is carried out.
PRODUCT FOR PROFESSIONAL USE.

WARNING

Although the technical details and recommendations contained in this product data sheet correspond to the best of our knowledge and experience, all the above information must, in every case, be taken as merely indicative and subject to confirmation after long-term practical application; for this reason, anyone who intends to use the product must ensure beforehand that it is suitable for the envisaged application. In every case, the user alone is fully responsible for any consequences deriving from the use of the product.
Please refer to the current version of the Technical Data Sheet, available from our website www.mapei.com

LEGAL NOTICE

The contents of this Technical Data Sheet ("TDS") may be copied into another project-related document, but the resulting document shall not supplement or replace requirements per the TDS in force at the time of the MAPEI product installation.

The most up-to-date TDS can be downloaded from our website www.mapei.com.

ANY ALTERATION TO THE WORDING OR REQUIREMENTS CONTAINED OR DERIVED FROM THIS TDS EXCLUDES THE RESPONSIBILITY OF MAPEI.

Mapei S.p.A.

Via Cafiero, 22, 20158, Milano



+39-02-376731



www.mapei.com



mapei@mapei.it

198-11-2025- EN

Any reproduction of texts, photos and illustrations published here is prohibited and subject to prosecution

